



Residential Delivery Version Addendum

In order to accommodate freight requirements, our TubTop enclosure must be shipped more compact. The four walls require on-site assembly rather than factory assembled. Use the following instructions to assemble the walls. Once assembled, continue using the standard assembly guide that is included.





Begin by identifying the parts to assemble each wall. The wall panels for each side are packed separately and labeled. The top and bottom frame are packed separately for each side and labeled. Each wall has two wall panels (Left hand and right hand), except for the back wall, which has a center panel included.

Lay out the two left and right panels with the exterior surface (painted side) facing down. Use the foam sheets that are used as packing material to protect the surface of the wall panel.

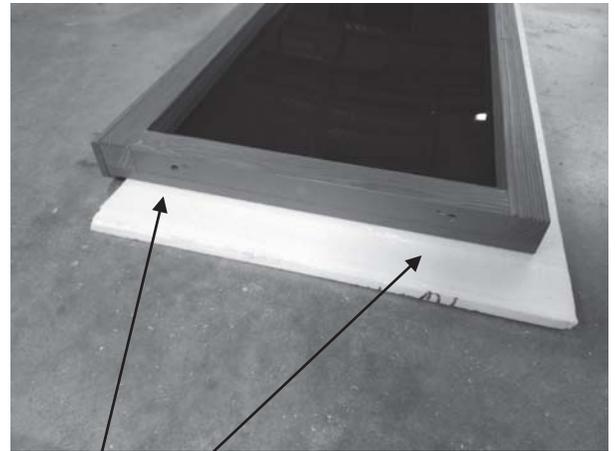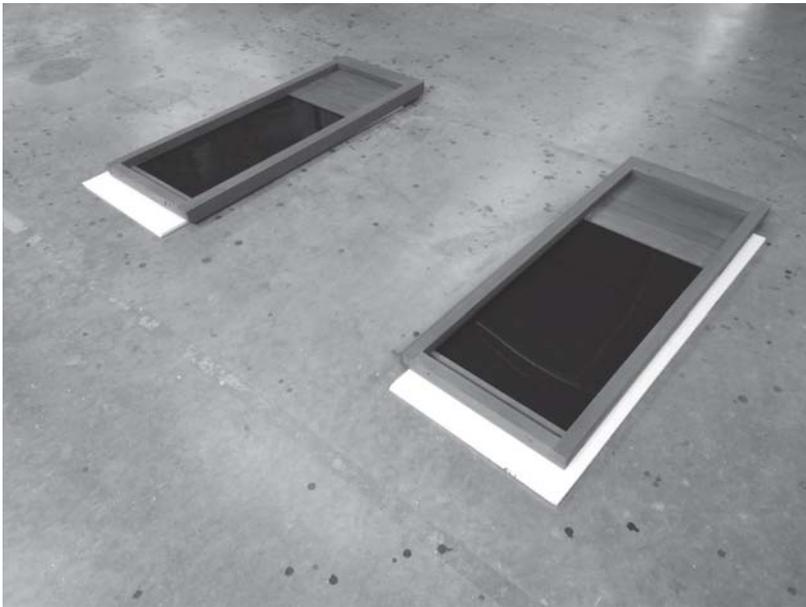

Dowel holes are located at the top end of the panels.


Apply glue to top of wall panel

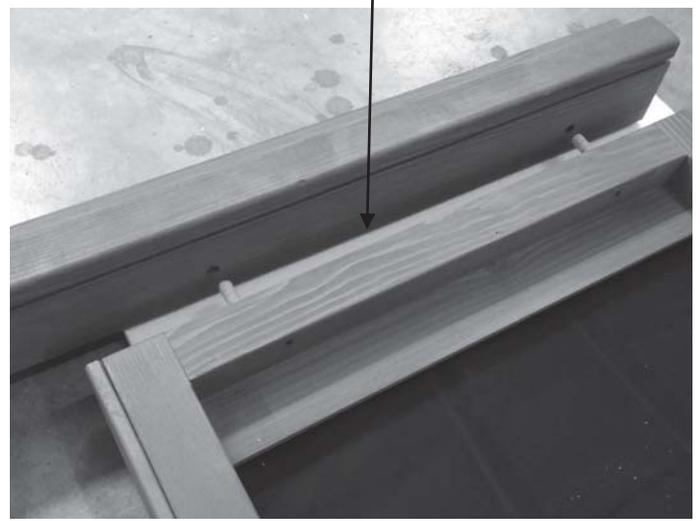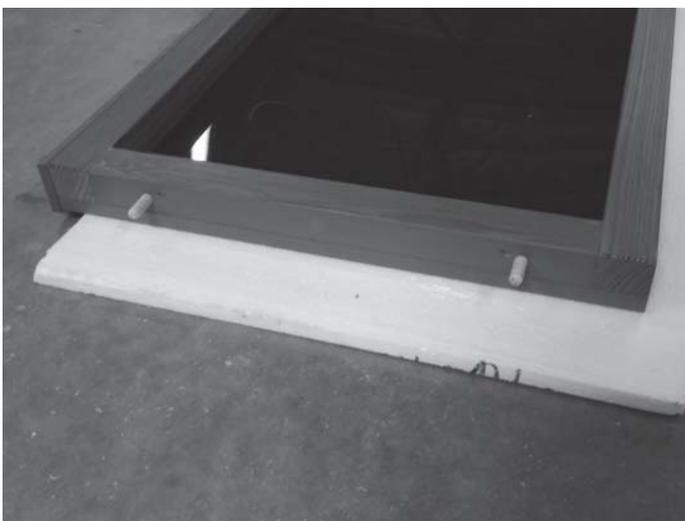

Insert the dowels into the holes. Apply a bead of glue (included) to the top of the wall panel. Place the top frame over the top end of the wall panels and align the top frame using the dowel pins.




Fasten the wall panels to the top frame using 2 1/2 inch wood screws as shown above. Smaller panels use two screws per panel. Larger panels use three screws per panel..

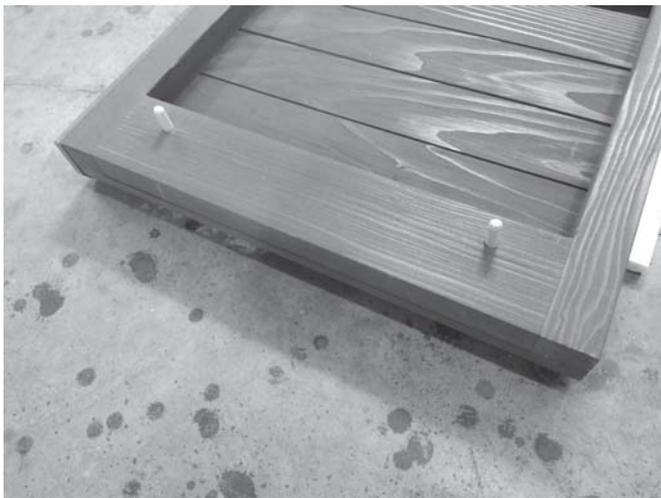

Insert dowels at the bottom end of the wall panel as shown above. These align the bottom frame.

Fasten the bottom frame to the wall panels using 2 1/2 inch wood screws as shown below.



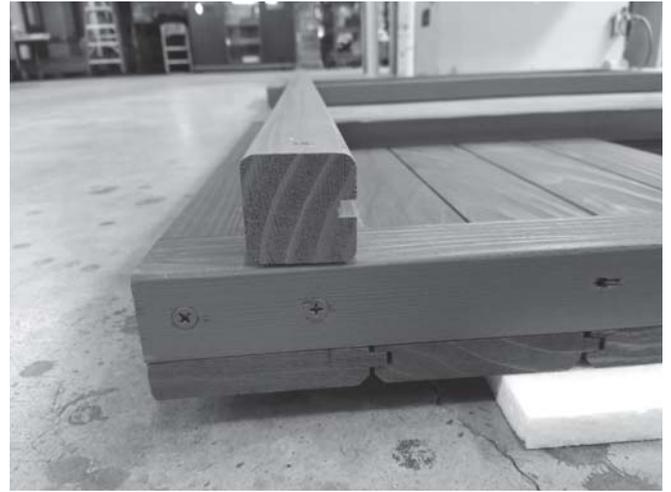

Side wall panels connect in the same manner, however the bottom frame is a smaller dimension to allow for connecting to the support shelf (shown later in the instructions)

The bottom frame is fastened to the wall panels using 2 1/2 inch wood screws.

The back wall (wall opposite the entry wall) has three wall panels as shown below. The center panel is predrilled on both side frames to attach to the left and right handed wall panels. Use 2 1/2 inch wood screws to attach.



Apply a bead of glue to top of wall panel before joining




Insert the dowel pins in both the top and bottom as in previous instruction. Place the top and bottom frames onto the wall panels as shown and fasten using 2 1/2 inch wood screws.



Apply the trim to the outside where the three panels meet. Peel off the paper masking of the double sided tape and place the trim over the center of the joint. Press firmly to apply.



Align the trim to the top of the wall panel sections.

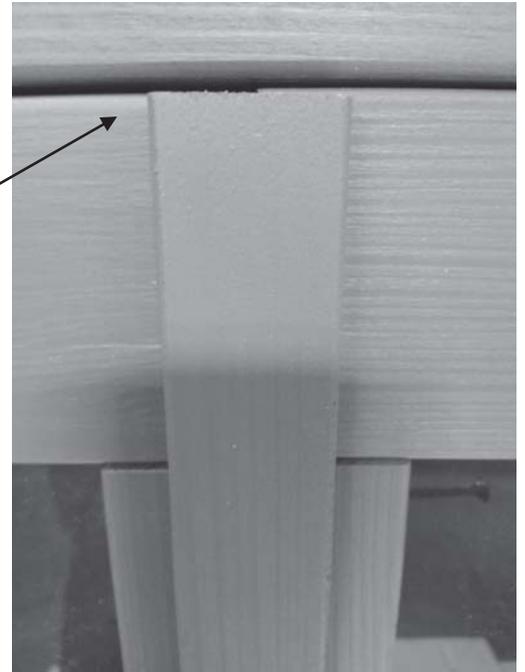

Once all of the screws are in place and secure, proceed with the installation using the standard assembly guide included.